

FieldSmart Transition Box

Installation Manual



FieldSmart Transition Box

Installation Manual



Table of Contents

Application	3
Description	3
Technical Specifications	3
Application: Non-Stubbed with MPO	4
Installing Incoming Feeder Cables	5
Application: Stubbed	8
Installing Drop Cables	9
Mounting	11
Connector Cleaning Procedure	14
Standard Warranty	14
Proprietary Notice	15
Technical Support	15

Application

In the coming years, small cells will start to become as common as fire hydrants. In urban and suburban neighborhoods we will begin to see them sprout up in many different environments. We may see these small cell radios being attached to a strand, mounted to an existing pole, or even deployed in a “smart pole” that is specifically designed to house these radios in an aesthetic manner. Regardless of where these radios will be mounted, they will require some fiber connectivity.

In some cases, the fiber that is being used to feed the site will be owned by the wireless provider. If the fiber that is being used to feed the site is not owned by the cellular provider, it will be advantageous to have separate compartments for the fiber provider and the end user. Clearfield’s Transition Box is a flexible and scalable solution to this need.



Description

The FieldSmart Transition Box is a secure, modular wall box that can support multiple cables with either MPO connections or patch only cables assemblies up to 48 LC terminations. The box is scalable in design with 12 fiber increments. Internally, radius limiters provide slack storage along with radius protection when routing cables. The customer side of the wall box allows up to eight individual cables.

Technical Specifications


FieldSmart Transition Box	
Dimensions	13.00" (L) x 8.00" (W) x 3.00" (D)
Mounting Options	Wall or Pole
Port Density	Maximum 48 terminations
Connector Types	LC/APC, LC/UPC, MPO
Material	Black UV Resistant Thermoplastic

FieldSmart Transition Box

Installation Manual



Application: Non-Stubbed with MPO

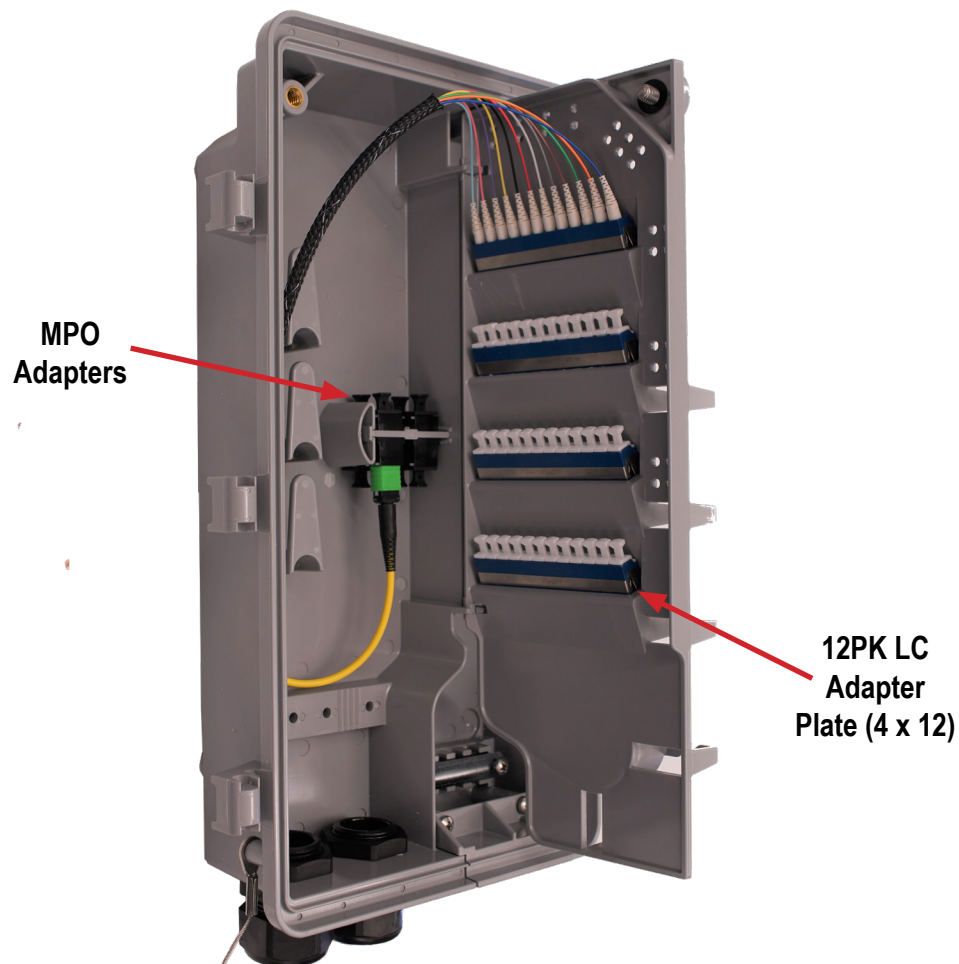

Note: Product comes from the factory with MPO cable assemblies pre-installed.


Installing Incoming Feeder Cables

Flat Drop


1. Take off the Sealcon compression fitting dome nut and remove the grommet from inside the Sealcon.



2. Remove the filler plugs from the holes in the grommet as needed. Slice the wall of the grommet in the locations where flat drop will be installed.

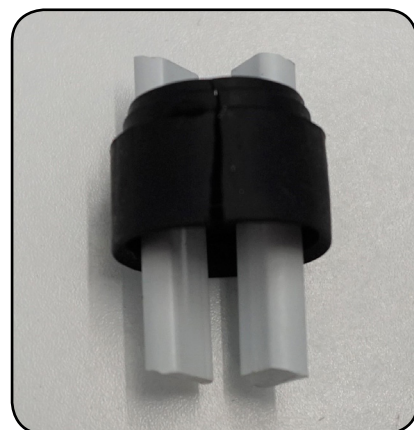

3. Place the Sealcon dome nut over the end of the flat drop cable(s). Insert the flat drop cables into the Sealcon grommet through the cuts you made.

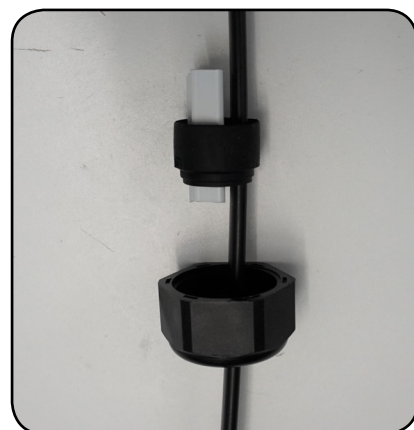

FieldSmart Transition Box

Installation Manual



4. Feed the ends of the cables through the Sealcon. Press the grommet back into place in the Sealcon.


Note: Grommet must be flush with the flanges of the Sealcon for proper seal.




5. Reinstall the dome nut onto the Sealcon and tighten firmly.



6. Route the incoming fiber up and around the radius rods. Inspect and clean, then connect the fiber into the designated adapter installed into the adapter plate in the base of the transition box.

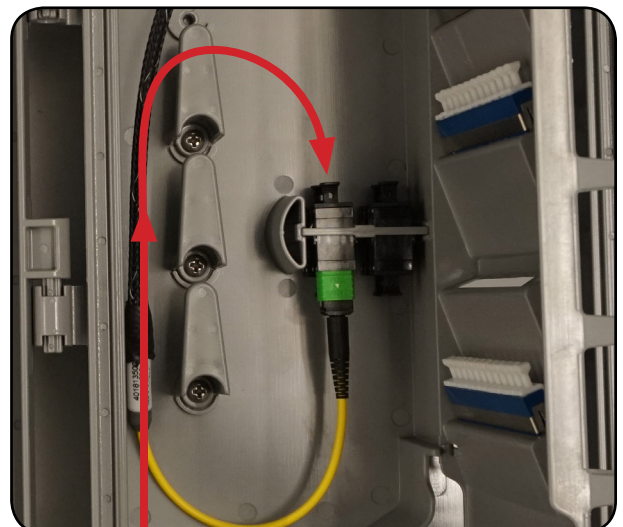

7. Close the bulkhead and secure it by tightening the nut at the top of the bulkhead door with a can wrench.

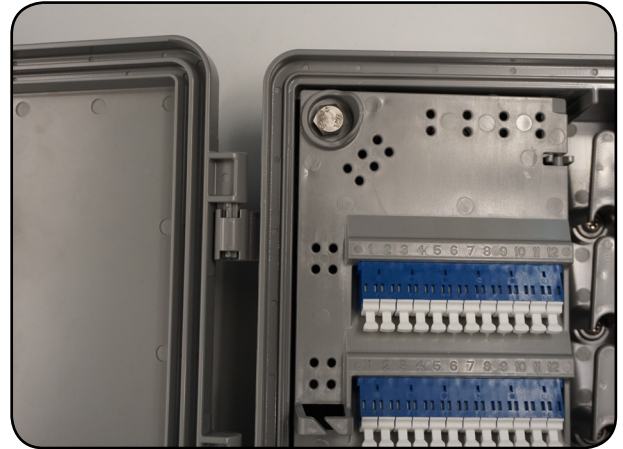


Round Cable

Round cable will be brought into the box through the Sealcons in a similar manner to flat drop cable. Instead of removing the grommet and splitting it, remove the flat drop grommet and install the round grommet. Proceed to installing the cable.



Strength Member Clamps

1. If utilizing strength member clamps, remove the clamps from the box.

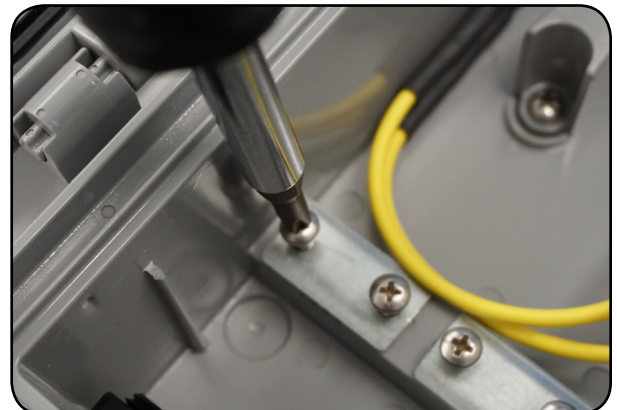


FieldSmart Transition Box


Installation Manual



2. Leave roughly 2.5 inches of strength member inside the box.

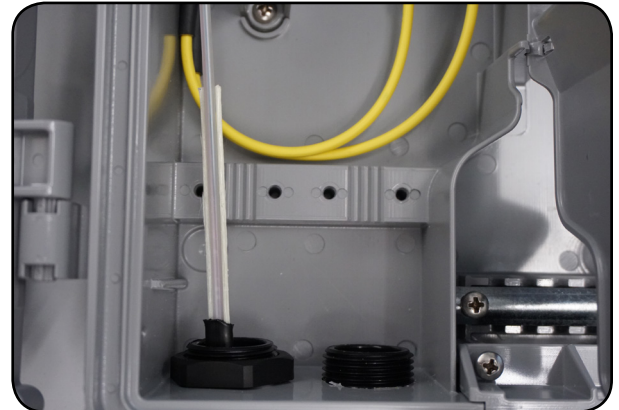

3. Place the strength member clamp(s) on top of the strength members, and tighten until fully secured.

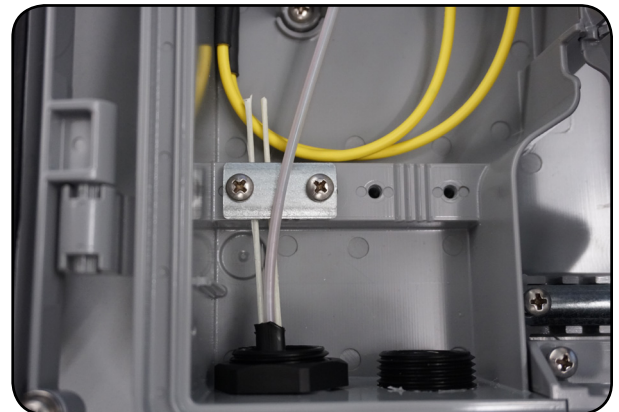

3. Trim the strength members to length just after the clamps.



Application: Stubbed


For stubbed applications of the FieldSmart Transition Box, the product will come from the factory with a pre-installed cable assembly. No incoming cable assembly will be required.

Installing Drop Cables


1. Remove the cable retention grommet plate.




2. Remove the cable retention grommet.

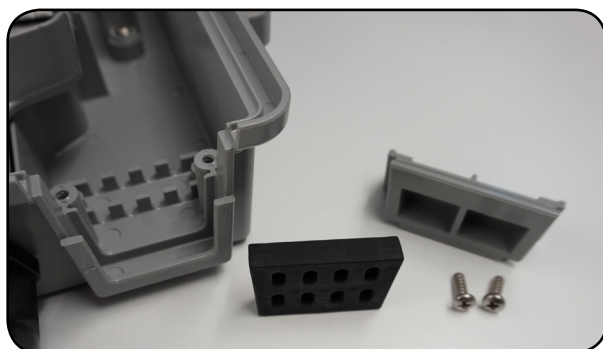

3. Cut the cable retention grommet at the locations where cables will be installed

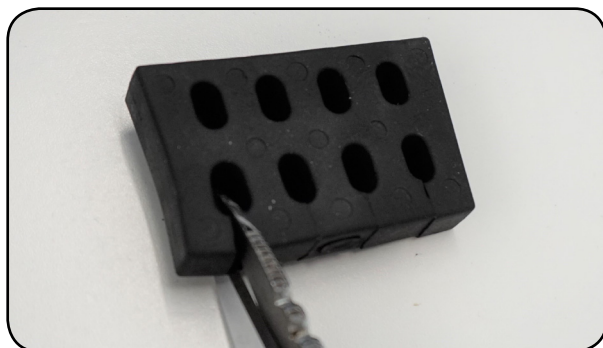

4. Install the cable(s) into the cable retention grommet, slipping them in through the side where you cut the grommet.

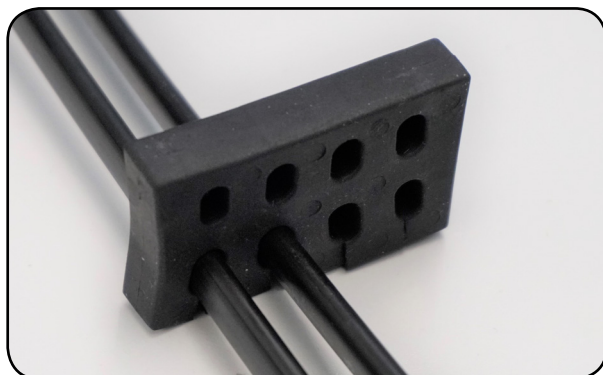


FieldSmart Transition Box

Installation Manual



5. Insert the cable retention grommet back into the slot on the wall box.

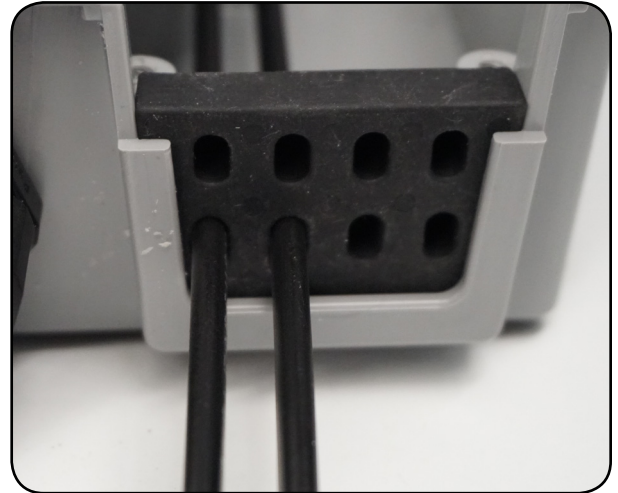

6. Reinstall the cable retention grommet plate, securing it in place with the two screws.




7. To secure the cables, install the v-clamp provided with the box. Using the two screws, tighten the v-clamp into the base of the box, allowing the edges of the clamp to grab the jacket of the cables.



Mounting

Four mounting locations are present on the base of the transition box. These will be utilized to install the box to the mounting bracket, in both wall and pole mount applications.

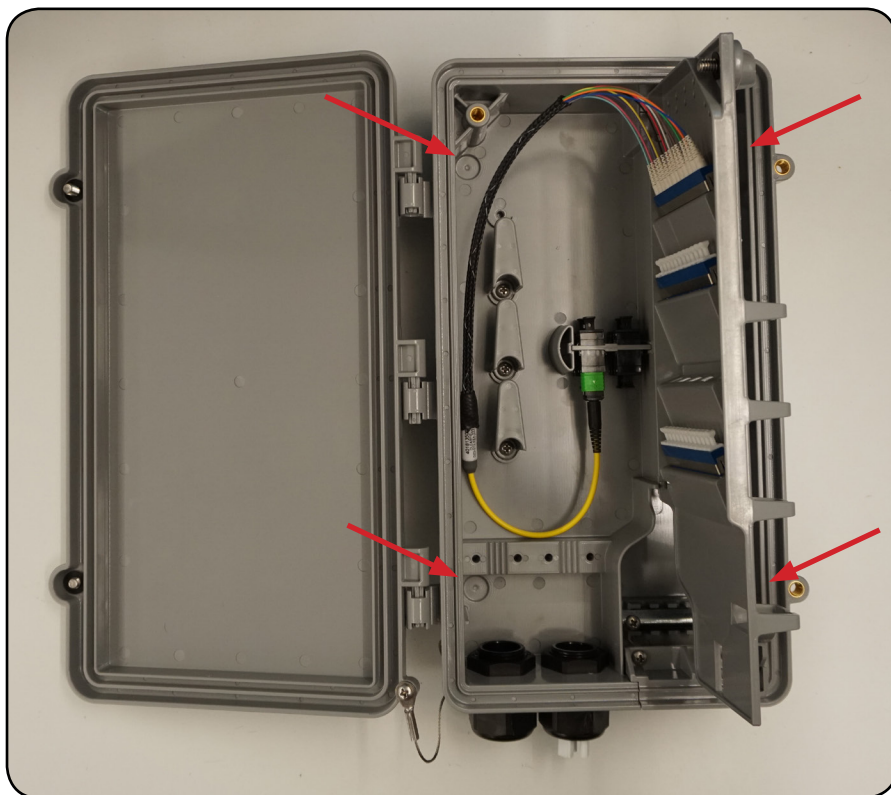

FieldSmart Transition Box

Installation Manual




Installing the Wall/Pole Mounting Bracket

When installing the mounting bracket onto a wall or a wooden pole, utilize fasteners of your preference to secure the mounting bracket in place with the two holes at the top and bottom center bracket. Ensure the bracket is facing the correct direction, with the flat side facing out.



When installing the mounting bracket onto a metal pole, utilize two band clamps, supplied by the customer. Each clamp will slip through the two adjacent slots in the underside of the mounting bracket. Once both are through the mounting bracket, secure the bracket to the pole using the band clamps.

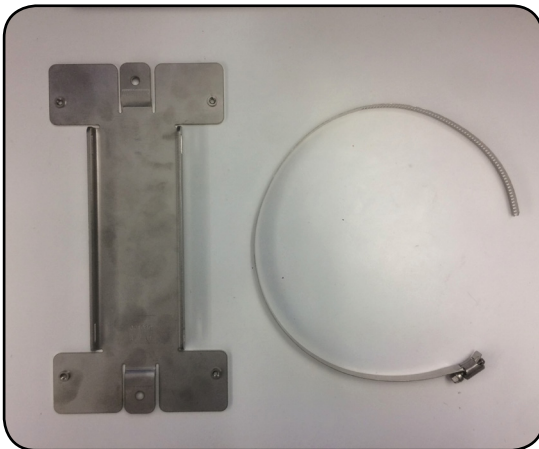

Mounting the Transition Box

To mount the box to the mounting bracket, utilize the provided screws and sealing washers. Place the screws through the washers, so the metal tops of the washers face towards the heads of the screws. Place the screws through the four pre-drilled holes in each corner of the box, and insert them into the pems of the mounting brackets. Tighten each screw until the soft underside of the sealing washer has compressed to half its original thickness.



Aerial Mounting

When mounting the transition box aerially, first install the box to the aerial mounting bracket using the 4 screws and sealing washers through the pre-drilled holes in the base of the box. Secure the box to the bracket by tightening the screws in the pems of the bracket until the sealing washers has been compressed by half their original thickness.

Note: When mounting the box to the aerial mounting bracket, ensure the hinged side of the box is upward. When accessing the box, slide the hinge pins of the lid out and allow the box lid to hang from the tether attaching it to the box. This will allow easier access to the wireline side of the box underneath the interior bulkhead.

Using a can wrench, loosen the bug nuts. Once you have the bug nuts around the strand in the location you wish to mount the box, secure it in place.



FieldSmart Transition Box

Installation Manual



Connector Cleaning Procedure

Utilize standard practices.

Standard Warranty

Clearfield warrants to the original purchaser of the Product sold hereunder is free from defects in material and workmanship under normal use and service, subject to exceptions stated herein. Product purchased is warranted as follows: Clearfield designed and branded Products are warranted for three (3) years; Products manufactured by Clearfield to customer prints and/or specifications are warranted for one (1) year; and any Product Clearfield acquires from or through a third-party manufacturer or distributor and resells to Customer as the original customer will carry the manufacturer's pass-through warranty, if any. In all cases, the warranty period commences on the date of shipment to the original purchaser.

Warranty Claim Procedure

If any Product purchased from Clearfield is found defective under the above warranty, the following basic procedure must be followed:

1. Customer must contact Clearfield and obtain a Return Materials Authorization
2. Following authorization, the Customer ships the product-freight collect to Clearfield's manufacturing facility
3. Clearfield shall repair or replace the defective Product at its sole option and discretion, and return the repaired or replacement Product to Customer's site, freight prepaid

Note: If the Product is not found to be defective by Clearfield, the product will be returned to the Customer and the customer billed for freight in both directions.

View our warranty policy here: <https://www.seeclearfield.com/warranty.html>

Limitations of Warranty

Correction of defects by repair or replacement, at the option of Clearfield Inc, shall constitute the exclusive sole remedy for a breach of this limited warranty. Clearfield shall not be liable under any circumstances for any special, consequential, incidental, punitive, or exemplary damages arising out of or in any way connected with the product or with agreement to sell product to buyer, including, but not limited to damages for lost profits, loss of use, or for any damages or sums paid by buyer to third parties. The foregoing limitation of liability shall apply whether the claim is based upon principles of contract, warranty, negligence or other tort, breach of statutory duty, principles of indemnity or contribution, the failure of any limited or exclusive remedy to achieve its essential purpose, or otherwise.

Clearfield will not be responsible for any labor or materials costs associated with installation or incorporation of Clearfield products at customer sites, including any costs of alteration, replacement or defective product, or any field repairs.

Other Limitations

Clearfield assumes no warranty liability regarding defects caused by:

1. Customer's modification of Product, excepting installation activities described in Clearfield documentation
2. Customer re-packaging of Product for shipment to third parties or destinations other than those originally shipped to by Clearfield, or any defects suffered during shipping where the Product has been re-packaged
3. Customer's installation or maintenance, excepting activities described in and performed in accordance with Clearfield documentation
4. Customer's improper or negligent use or application of Product
5. Other causes external to the Product, including but not limited to accidents, catastrophe, acts of God, government action, war, riot, strikes, civil commotion, sovereign conduct, or the acts or conduct of any person or persons not party to or associated with Clearfield
6. Environmental factors and weathering resulting in aging and damage not necessary or applicable to the function of the product



FieldSmart Transition Box

Installation Manual

Proprietary Notice

Information contained in this document is copyrighted by Clearfield, Inc. and may not be duplicated in full or part by any person without prior written approval of Clearfield, Inc.

Its purpose is to provide the user with adequately detailed documentation to efficiently install the equipment supplied. Every effort has been made to keep the information contained in this document current and accurate as of the date of publication or revision.

However, no guarantee is given or implied that the document is error free or that it is accurate with regard to any specification.

Technical Support

Clearfield, Inc. can be contacted for any issues that arise with the supplied product.

If you need to return the supplied product, you must contact the Clearfield, Inc. Customer Service Department to request a Returned Materials Authorization (RMA) number.

Clearfield, Inc.
7050 Winnetka Ave N
Minneapolis, MN 55428

Toll Free: 800.422.2537
Phone: 763.476.6866
Fax: 763.475.8457

Customer Support: sales@clfd.net
Technical Support: techsupport@clfd.net